

# Alignment Ring Installation Guide

#### **Before You Start**

These instructions are relevant for installation on EXO2 and EXO3 Sondes.


#### What Do You Need?

- 1. EXO2 or EXO3 Sonde
- 2. EXO Central Wiper


- 3. EXO Smart Sensor (x3)
- 4. EXO2/EXO3 Alignment Ring

#### **EXO Wiper and Sensor Installation**

Roll the new o-ring up the wiper probe until it seats under the wiper brush quard.

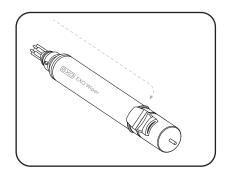

Install the Central Wiper on to the sonde bulkhead followed by the smart sensors.

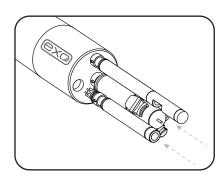


Do NOT leave any ports empty. Port plugs must be inserted into any port that does not have a sensor.

## **EXO Alignment Ring Installation**




Slide the Alignment Ring over the sensors.

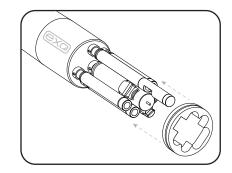




**IMPORTANT:** The top of the Alignment Ring should line up with the seam on the brush guard.

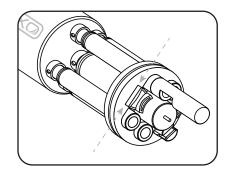

2

While holding the Ring in place, carefully pull the larger o-ring over the sensors and fit into the groove.

Once the o-ring is fully seated around the Alignment Ring, installation is complete.

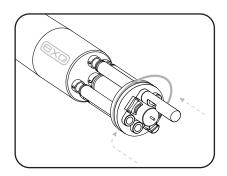

### **Contact Information**

