


Selection Guide for YSI 6-Series pH and pH/ORP Probes



Standard Probe – Guarded Glass Bulb

6561 pH – Item # 006561
6565 pH/ORP – Item # 006565

Use with: All 6-Series sondes with a user-replaceable pH port.
Strengths: Provides general monitoring flexibility. Produces very stable readings. Rugged and guarded.

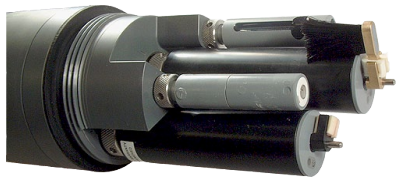

Flat-Glass Probe

6561FG pH – Item # 605091
6565FG pH/ORP – Item # 605092

Use with: 6600EDS Sonde ONLY.
Strengths: Produces unattended pH readings in high-fouling environments on 6600EDS sondes. Wipeable by 6600EDS brush (part # 606630 plastic or 616630 AF). Glass is well-protected.



Unguarded Glass Bulb Probe

pH/ORP 6566 – Item # 006566

Use with: 6600EDS Sonde ONLY.
Strengths: Produces unattended pH readings in high-fouling environments on 6600EDS sondes. Wipeable by 6600EDS brush (part # 606630 plastic or 616630 AF). Produces very stable readings.



Hemispherical Glass Probe

6579 pH – Item # 606579
6569 pH/ORP – Item # 606569

Use with: 6600V2-4 Sonde with 606445 plastic or 616445 AF wiper/brush.
Strengths: Produces unattended pH readings in high-fouling environments on 6600V2-4 sondes. Greater length and hemispherical bulb is wipeable by a 6600V2-4 sonde brush. Hemispherical shape largely protects bulb.



Fast-Response Probe

6589 pH – Item # 606589

Use with: 6-Series sondes with user-replaceable pH port, except 600XLV2 or 600XLM V2
Strengths: Provides rugged general monitoring flexibility. Produces fast, stable readings in difficult pH measuring environments.
Design restores old instrument's pH response time to like-new.
** If used with 600XL or 600XLM, order a different probe guard (part # 655264) and longer calibration tube (part # 655521). If used with 6600EDS, you cannot use EDS wiper brush.*



Standard 600R/600 QS Probe

6581 pH – Item # 006581
6554 pH/ORP – Item # 655481
6580 pH Reference – Item # 006580

Use with: Probes come installed on 600R and 600QS sondes.
Only 6580 reference is user-replaceable.