

KorEXO Firmware Update


DOWNLOAD AND APPLY THE LATEST FIRMWARE

1

Visit the YSI **Software and Firmware Downloads** page:

<https://www.ysi.com/customer-support/software-firmware-downloads/software>


Under **Firmware**, click the button to download the latest KorEXO Firmware Update Package.

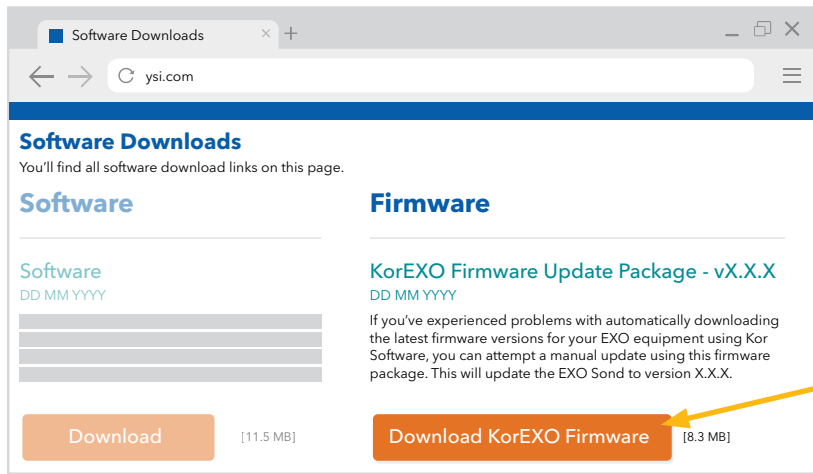


2

Locate the download file (typically in the **Downloads** folder on your computer) which is zipped.


Right Click on the folder and select **Extract All**. This will unzip the files into a folder named **korex0-firmware-[Version]**

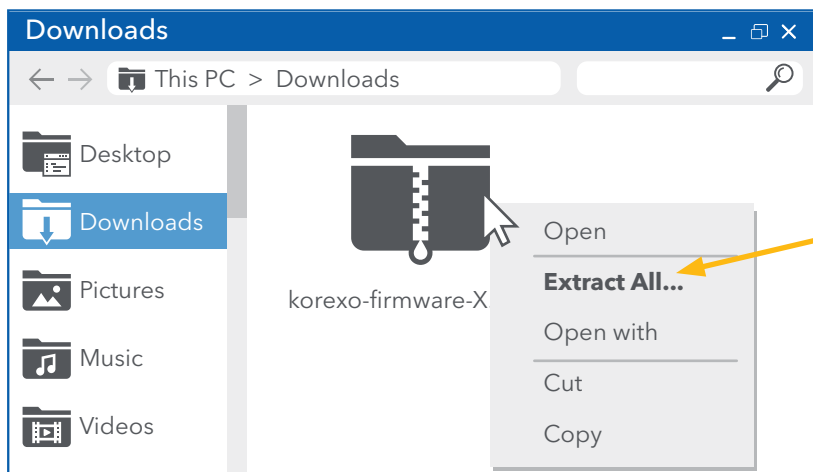

- 3 **Double-click** to open the firmware folder. Inside, there will be another .zip file along with the KorEXO Manifest file. Leave this folder as-is with those two files inside. When you browse for a local update package (Step 5), you will point to this folder.

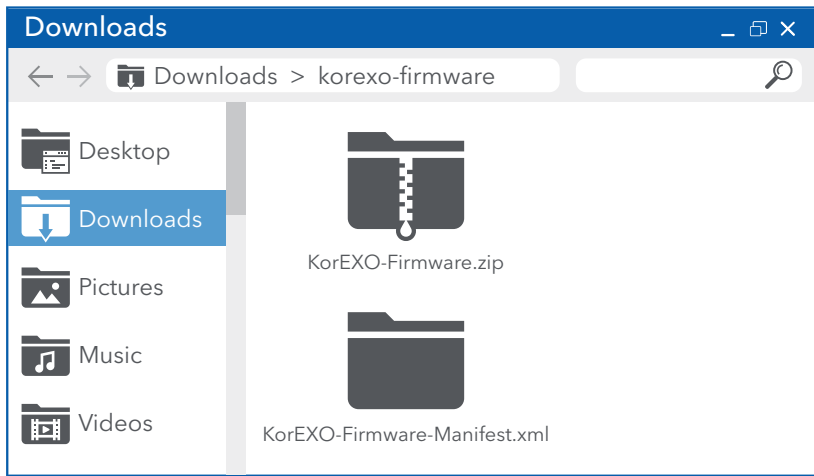


- 4 Launch KorEXO Software and click on the **File** menu. Select the **Click Here to Browse for a Local Update Package** button.

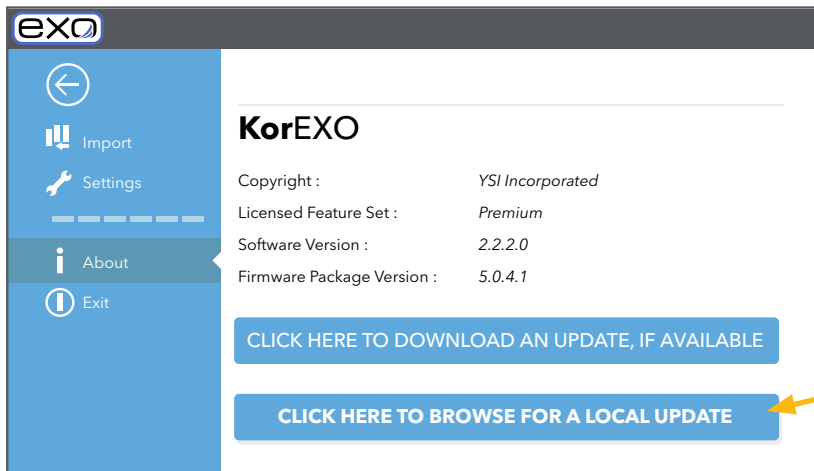

NOTE: If you do not see this button, perform the following steps:

- Click on **Settings** and toggle the setting for **Automatically Update Software and Firmware** to **Off**.
- Click **Save** and close KorEXO Software.

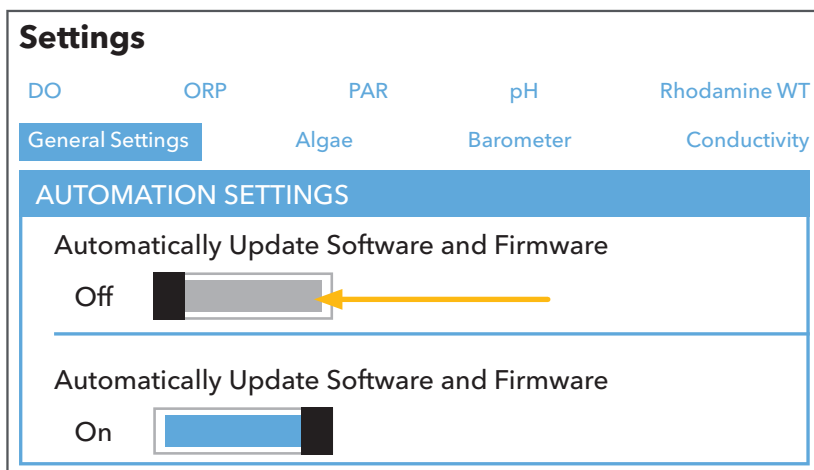


- Open KorEXO Software again and click on the **File** menu.
- There should now be a **Click Here to Browse for a Local Update Package** button.

5


When browsing for a local update package, select the folder that you extracted earlier and those files will be imported into the software. When it is done, an **Update is Available** message will appear.

Close and restart KorEXO Software and the firmware update will be applied.

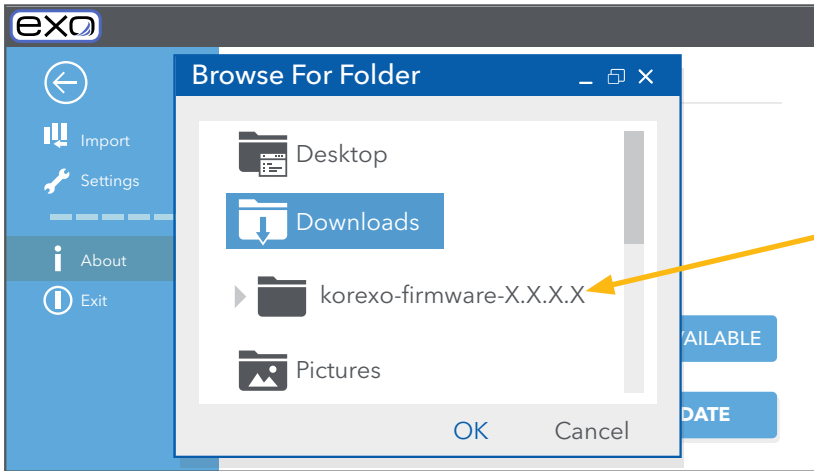

6

Connect your instruments to the software. If the firmware update is not applied automatically upon connection, navigate to the **Instruments and Sensors** menu and click the **Update Instrument Firmware** button.

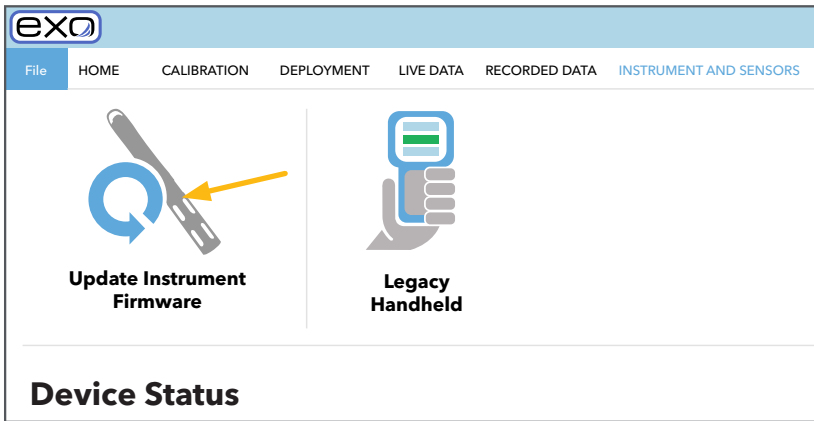

KorEXO Software will apply the latest firmware to all connected instruments.