
# AD200-4 and AD200-1 Voice Autodialers

**Autodialers for Easy Voice Alarming** 

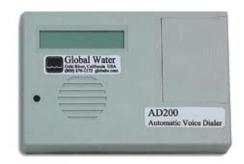

### **Description**

Global Water's AD200 Voice Alarm Autodialers provide cost-effective notification of emergency conditions such as high water levels, equipment failures, and security breaches. For applications without a land line, see the CVD-2000 Cellular Autodialer.

#### Multiple and Single Alarm Models

The AD200-4 accepts 4 alarm inputs and will store and dial up to eight numbers, including numbers for standard (voice) phones, most cell phones, and pagers. For single alarm applications, the low-cost AD200-1 accepts one alarm input and will dial up to four phone and pager numbers. When either model senses an alarm, it begins to dial out, sending your own pre-recorded alarm messages—voice messages to your phone list and numeric codes to your pager list.

#### **Easy Operation**

The AD200 dialer is easy to program via the on-board keypad, LCD display, and built-in speaker. Any NO (normally open) or NC (normally closed) contact or low voltage input may be used to trigger the AD200; including float switches, door switches, water sensors, and motion detectors (see Ordering & Options below).

### Flexible Power

The AD200-1 includes provision for backup power via a standard 9 volt battery. For the AD200-4, we offer an optional auto-charge battery pack that will maintain operation for up to 24 hours in the event of an extended power failure. Both models include an AC adapter for normal operation.

## **Specifications**

Indoor
9 to 18 VDC (AC adapter included)

Number of Inputs	AD200-4: Four
	AD200-1: One
Battery Backup	AD200-4: Original battery pack
	AD200-1: 9VDC battery (not included)
Activation	Dry contact: NO or NC, momentary or continuous
	Voltage: 0 to +V (NC) or +V to 0 (NO), 5 to 28 VDC
Phone Number	AD200-4: Up to 8
Storage	AD200-1: Up to 4
14 ' D' '	00 /: 1 /:

	Maximum Digits	28 (including up to 10 pauses)
	Dimensions	6 x 4 x 1.5"
i		(15.2 x 10.2 x 3.8 cm)
	Optional Enclosure	12 x 10 x 6"
	Dimensions	$(30 \times 25 \times 15 \text{ cm})$
		,
	Weight	0.8 lb (.4 kg)
		5.5 .5 (g)

#### **Features**

- Records your own voice message for each alarm input
- Calls up to eight numbers in any combination of telephones or pagers
- Sends voice message to phones or numeric code to pagers
- Easy to install and program
- Non volatile memory protects program against power failures
- Programmable exit and entry delay
- Internal 9V battery backup (AD200-1)
- Three-year limited warranty
- 1/8 DIN front panel mount enclosure

### **Applications**













Ideal for cost-effective notification of emergency conditions such as high water levels, equipment failures, and security breaches for a variety of applications.

### **Ordering & Options**

#### **Autodialers**

Order No.	Inputs	Dial Out	
AD200-4	4	8 Ph/Pgr	
AD200-1	1	4 Ph/Pgr	

#### Accessories

Order No.	Description
AD200-BKUP	Backup Power Pack for AD200-4
AD200-AC	Extra AC Adapter
AD200-DS	Door Switch, heavy duty magnetic
FE1000	Optional Enclosure
WA600	Water Alarm Sensor
WA100	Float Switch



In the U.S. call toll free at 1-800-876-1172 International: 1-979-690-5560 Fax: 1-979-690-0440 Email: globalw@globalw.com

Visit our online catalog at: www.globalw.com Our Address: 11390 Amalgam Way Gold River, CA 95670