




a xylem brand


Installation Manual

MS/RKH 170

Pipe bracket

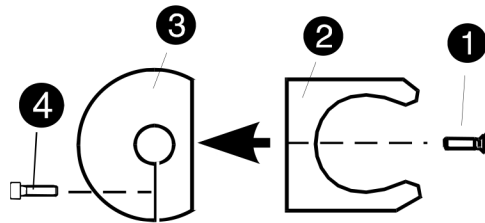

Assemble tube clamp ② with holder ③ and screw with countersunk bolt ①.

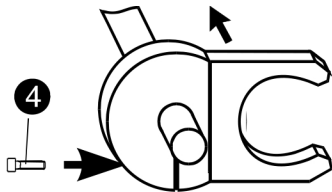

Lead holder over the pendulum bar and screw tight in the desired position with cheese-head screw ④.

Equipment consists of

Pos.	Article	Quantity
①	Countersunk bolt M5 x 20	1
②	Tube clamp \varnothing 40	1
③	Holder	1
④	Cheese-head screw M8 x 30	1

Materials

Pos.	Material
①, ④	Stainless steel 1.4301
②	Polyethylene
③	POM black